


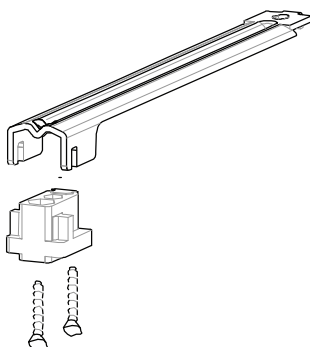


1. Assemble soft close catch.




2. Cut track to length.

- a. *Make sure there is a mounting hole 2" from the end of the track. Drilling may be required.
- b. Wipe out track.
- c. See pro-tips for multiple segments of track.
- d. If no cutting is required, skip to step 3.

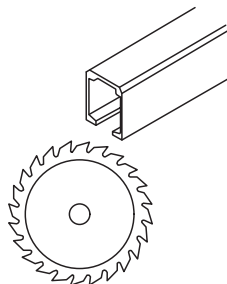


3. Insert soft close catch(es) and roller(s) into track. Insert track caps at each end. Secure track to header.


- a. Wipe out track.
- b. **Suggested for bypassing systems:** Rip strips of MDF to use as a spacer between rows of tracks. Prime and paint before fastening. This helps maintain spacing and gives ceiling/header a finished look.

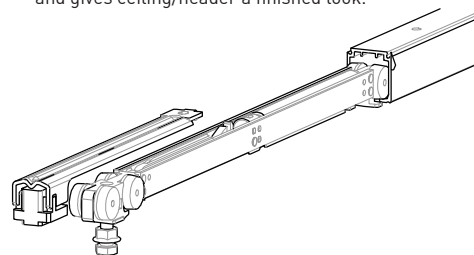

4. Hang panel by inserting hanging bolt into side of low-profile mounting plate to end of channel. Repeat at other side of panel.

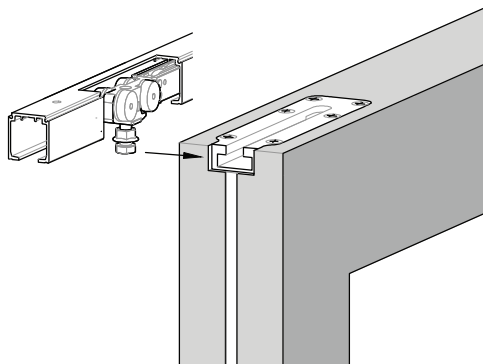


5. Adjust height as necessary by sliding bolt out of panel then threading the bolt up or down until panel is level. After adjusting, make sure bolt is fully inserted back into panel. Tighten locknut with wrench.


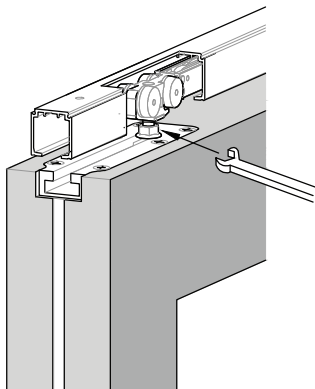


6. Tighten set screw for soft close catch and set tension screw.

- a. Recommended to tighten tension screw until screw stops then loosen as necessary until door engages and closes.

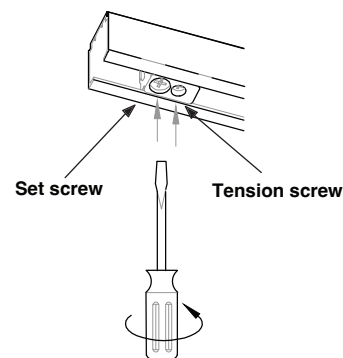

7. Insert caps into mounting plates.

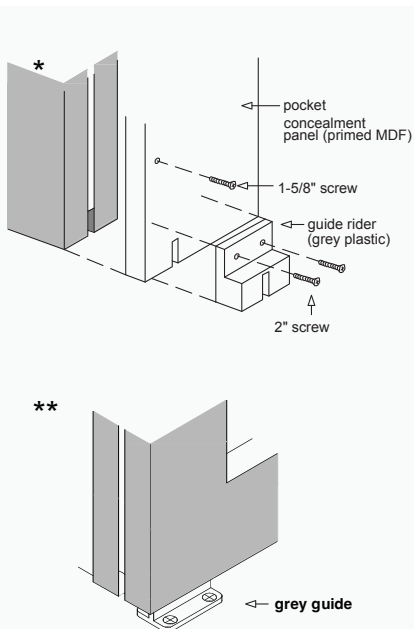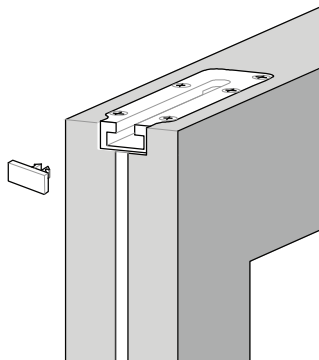

PRO TIPS: Track must be mounted securely to framing or blocking with #8 pan head screws at least 1-1/2" long. Track must be level even if floor and ceiling are not. Panels can weigh up to 150 lbs. a piece — reinforcement may be necessary. It is the responsibility of the installing contractor to determine this. Longer spans will require lengths of track to be fit end to end — be sure both factory edges meet and align carefully.

***POCKET DOORS:** When installing a pocket door, be sure to place pocket guide and track before finishing wall. When hanging door, place Pocket Concealment Panel & Guide Rider on trailing edge of last panel, aligning with groove on bottom of panel. **Do not place a track stop within pocket.**

****GREY GUIDES:** For sliding wing walls, bypassing, and single sliding door systems, grey guides must be placed on the floor. By setting track stops and limiting the doors travel, grey guides will always be concealed by the door. See operation overview page of your system's verification drawings for locations. For wing walls and single sliders, the centerline of the guide should be 1-3/8" off the adjacent wall unless otherwise noted.