


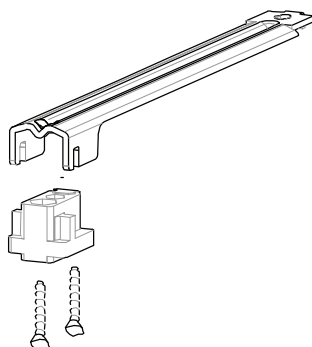


1. Assemble soft close catch.




2. Cut track to length.

- Make sure there is a mounting hole 2" from the end of the track. Drilling may be required.
- Wipe out track.
- See pro-tips for multiple segments of track.
- If no cutting is required, skip to step 3.

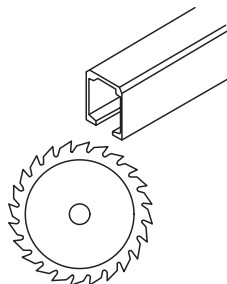


3. Insert soft close catch(es) and roller(s) into track. Insert track caps at each end. Secure track to header.


- Wipe out track.
- Suggested for bypassing systems:** Rip strips of MDF to use as a spacer between rows of tracks. Prime and paint before fastening. This helps maintain spacing and gives ceiling/header a finished look.

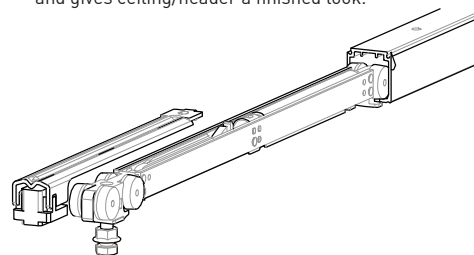

4. Hang panel by inserting hanging bolt into side of low-profile mounting plate to end of channel. Repeat at other side of panel.

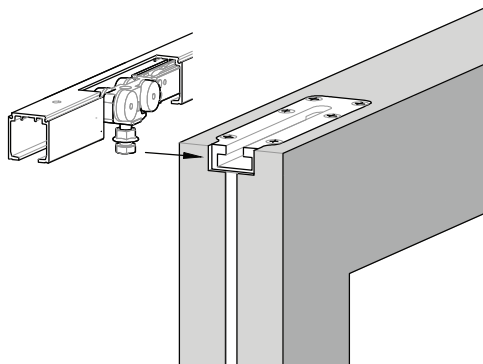


5. Adjust height as necessary by sliding bolt out of panel then threading the bolt up or down until panel is level. After adjusting, make sure bolt is fully inserted back into panel. Tighten locknut with wrench.



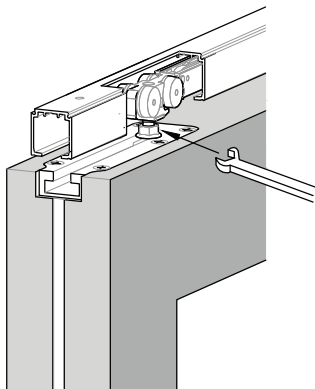


6. Tighten set screw for soft close catch and set tension screw.

- Recommended to tighten tension screw until screw stops then loosen as necessary until door engages and closes.

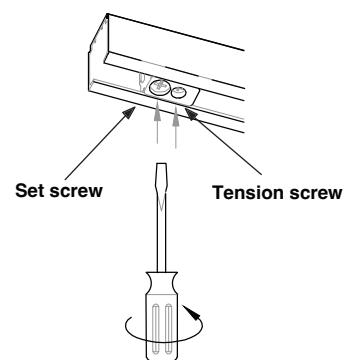

7. Insert caps into mounting plates.

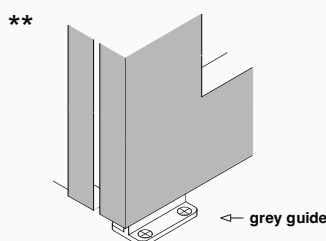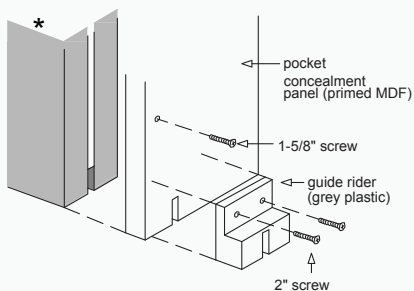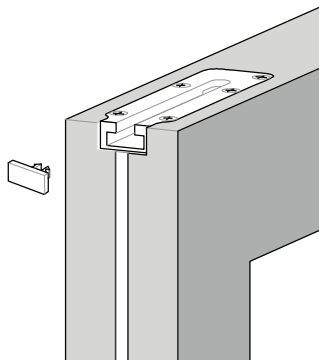


PRO TIPS: Track must be mounted securely to framing or blocking with #8 pan head screws at least 1-1/2" long. Track must be level even if floor and ceiling are not. Panels can weigh up to 150 lbs. a piece — reinforcement may be necessary. It is the responsibility of the installing contractor to determine this. Longer spans will require lengths of track to be fit end to end — be sure both factory edges meet and align carefully.

***POCKET DOORS:** When installing a pocket door, be sure to place pocket guide and track before finishing wall. When hanging door, place Pocket Concealment Panel & Guide Rider on trailing edge of last panel, aligning with groove on bottom of panel. **Do not place a track stop within pocket.**


****GREY GUIDES:** For sliding wing walls, grey guides must be placed on the floor. By setting soft close catches and limiting doors travel, grey guides will always be concealed by door. See operation overview page of your system's verification drawings for locations. For wing walls, the centerline of the guide should be 1-3/8" off the adjacent wall unless otherwise noted.




1. After all doors are hanging, install guiding system. Install heavy duty RGS hooks on faces of doors using provided screw and fastening to pre-drilled locations on doors.

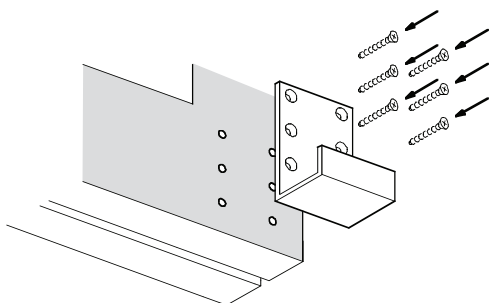


2. Slide adjacent door so that hook slips into bottom channel.

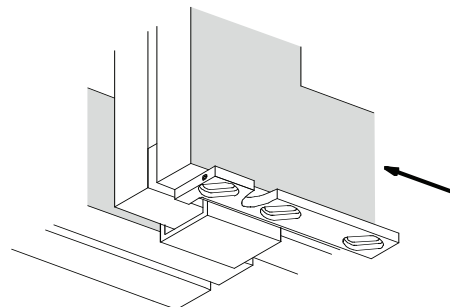

3. Move sliding stop on bottom of door into closed position (should now block the channel into which hook was just slipped into).

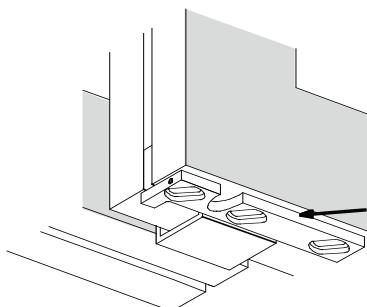

4. Set sliding stop by tightening set screw with allen key (5/64").

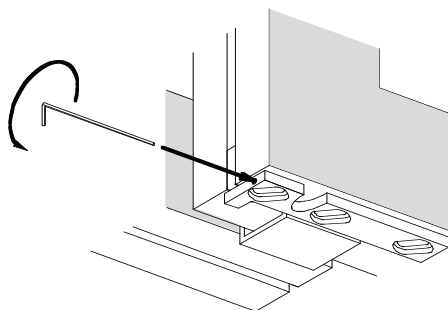

TIP: Use separate/non-combination key for easier insertion and turning to avoid stripping screw.

5. Repeat process with remaining doors until all are connected (hooks should not be able to slide out of bottom groove laterally when complete).


6. Make sure that doors are hanging at heights such that hooks are not bearing any weight of adjacent doors. If there is any contact between bottom of adjacent frame and hook, doors will not operate properly and may be damaged.

SEE: RGS best practices on next page.




PRO-TIPS:

Rip strips of MDF to use as spacer between multiple tracks. Prime and paint before fastening. This helps maintain spacing and gives ceiling/header finished look.

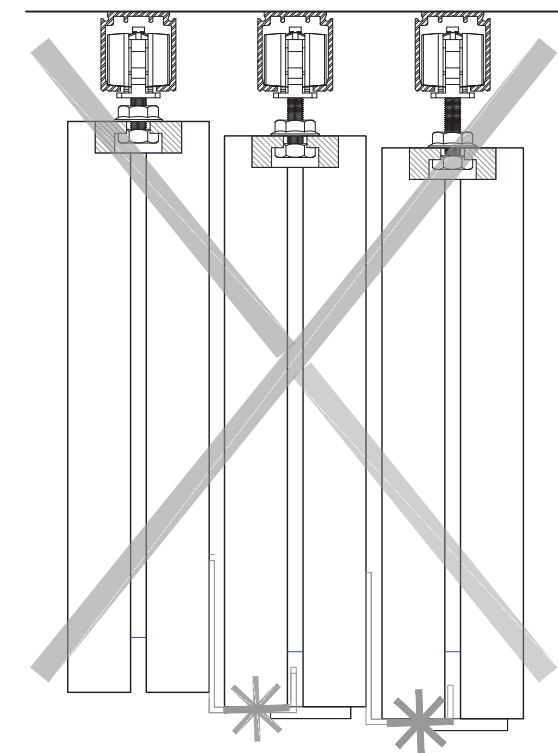

Door with Hook Set too high cause following doors to it on hooks and drag.

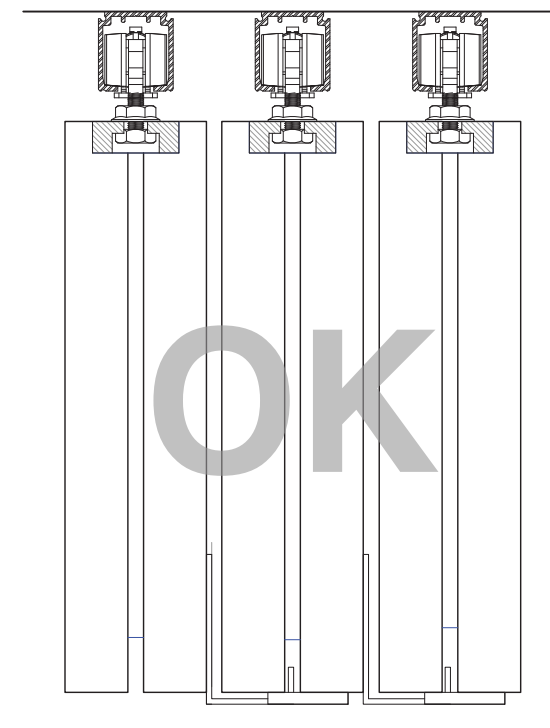

Door with first hook set lowest (trailing door), each subsequent door should be higher