


# DETERMINE YOUR OPENING DIMENSIONS

The first step towards finding the right Raydoor® for your next project is to measure.

- 1 Opening height is determined by measuring from the finished floor to top of level track. The top of leveled track is where you intend on screwing the track to, typically wood blocking. If surface mounting the tracks directly to the ceiling, make sure there is adequate support above.
- 2 Opening width is determined by measuring from finished wall to finished wall. No jamb or wall treatment is provided or necessary with Raydoor products.

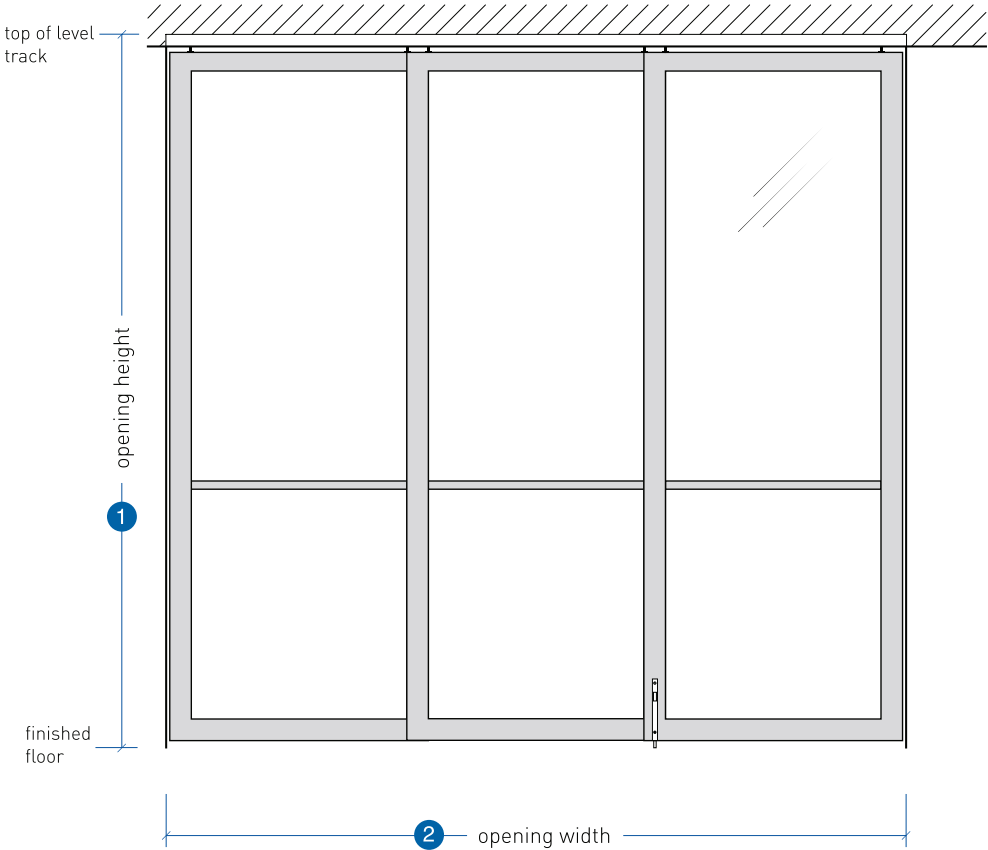

## NEXT STEPS

- After measuring your opening dimensions, explore [raydoor.com](http://raydoor.com) to determine the system type and panel configuration best suited for your opening.
- Once you've decided which system(s) to use, you can then fully customize it by selecting from our wide variety of frame, insert, hardware, and pattern options.
- When you are ready to order simply request a quote online, visit our showroom in person or call and talk to one of our design consultants directly.