



1. Cut guides to length. Install top guide into ceiling/header using appropriate screws (top guide must be level — shim as necessary). Use plumb bob/laser from center of top “T” guide to determine placement of center bottom “U” guide.

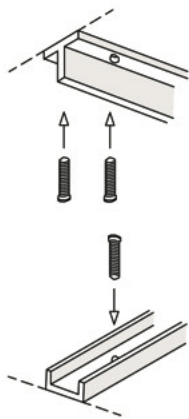


PRO TIP: Use a continuous run of guides if installing multiple panels in a row.

2. Slightly angle door and slide top door recess onto top “T” guide.

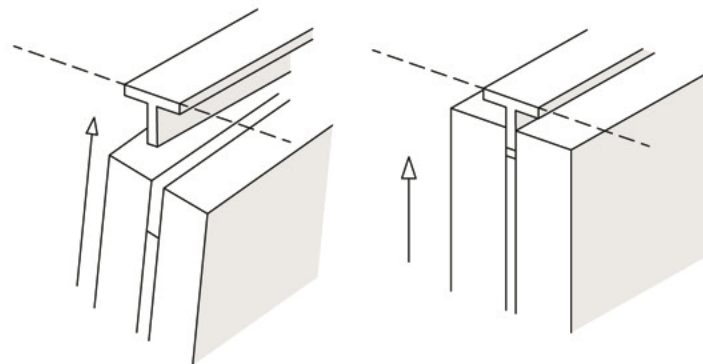


NOTE: For fixed panels with open access (no jamb) on one side: Slide panels into top and bottom guides from access point. Proceed to step 4.

3. With door fully raised and blind leveler feet fully retracted, angle bottom of door over bottom “U” guide and lower so feet sit within guide.

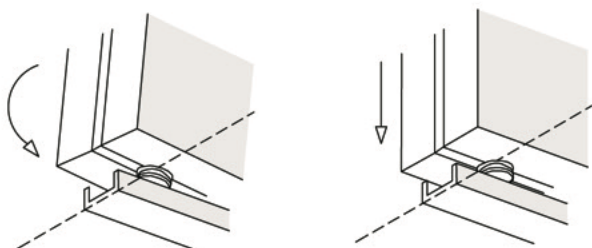


4. Adjust height of blind levelers to lower feet into bottom “U” guide with Allen key. Ensure that panels are level.

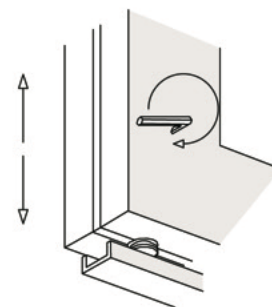

PRO TIP: Do not raise panels to point of pressing into top guide (see drawings for exact details).

5. If adding multiple panels in a row, install spline between panels. Insert spline by fitting between two halves of frame on edge of panel (there should be a groove).

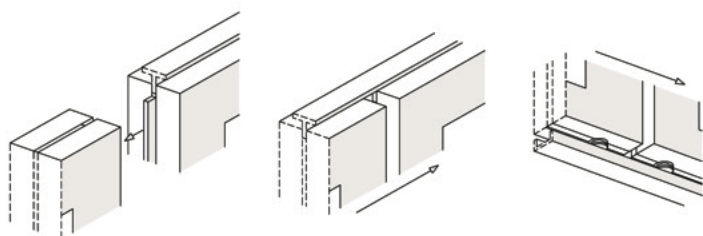

6. For optional sound dampening, wedge soft gasket between blind leveler feet and bottom “U” guide. Lower panel slightly to compress.

